

Smart Push-Button Remote Mechanism with ControlLink and LED

PDL356PBSSL-VW

Iconic











Follow the installation instructions





Configure the mechanism if required





Prerequisites and accessories

- · Any Iconic push button primary mechanism with ControlLink capability.
- · Iconic grid, skin and dolly for mounting. Note: Parts packs are available separately in various colours to complement the installation decor. See pdl.co.nz/lconic for more information
- · Standard wiring for ControlLink connections.

Getting to know the Smart Remote Mechanism

- · Push button (tactile) control
- · ControlLink remote multi-way dimming and switching
- · Load state indicator
- · Works 'out of the box' with the Wiser Iconic Push-Button Dimmer.

For your safety

A A DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- It is illegal for persons other than an appropriately licensed electrical contractors or other persons authorised by legislation to work on the fixed wiring of any electrical installation.
- To comply with all safety standards, the product must be used only for the purpose described in this instruction and must be installed in accordance with the wiring rules and regulation in the location where it is installed
- · There are no user serviceable parts inside the product.

Failure to follow these instructions will result in death or serious injury.

A A DANGER

HAZARD OF ELECTRIC SHOCK

- · Hazardous voltage and electrical current may be present at the wire leads and outputs of this product even when the device is switched off or the dimmer controls set to zero brightness
- Lock out and tag the input circuit before accessing the wiring
- · The Locking Bar on Iconic grids must be set to the Closed position to ensure that the mechanism cannot be removed during normal operation.

Failure to follow these instructions will result in death or serious injury.


A CAUTION

EQUIPMENT DAMAGE HAZARD


- · Install the device according to instructions in this document.
- · Pay attention to the specifications and wiring diagrams related to the installation.
- · Do not use this product for any other purpose than specified in this instruction

Failure to follow these instructions can result in injury or equipment damage.

Fitting the mechanism to the grid

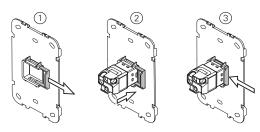


Cabling and connections

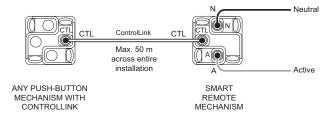

Notes:

- All Active connections must be on the
- Total length of ControlLink cable in an installation must not exceed 50 m.

Example: Typical 3-way dimmer installation using Wiser Iconic Push-Button Dimmer + 2 Smart Remote Mechanisms

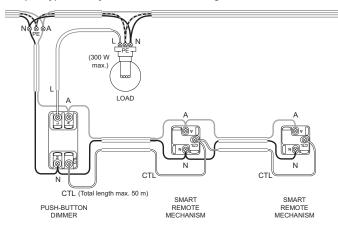


All Active connections must be on the same phase.

Neutral L Load
CTL ControlLink
PE Protective Earth


Notes:

- · Up to 5-way dimming is possible with a maximum of 4 Smart Remote Mechanisms.
- · Multiple dimmers cannot share the same load(s).
- Total length of ControlLink cable in an installation must not exceed 50 m.


Mounting the grid

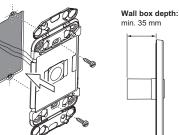

Installing the skin

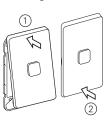

Removing the skin

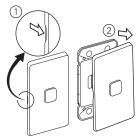




Smart Remote Mechanism and Iconic Push-Button Dimmers—default settings

The Smart Remote Mechanism works 'out of the box' with the Wiser Iconic Push-Button Dimmer and the Iconic Push-Button Universal Dimmer with ControlLink. The mechanism LED indicator automatically follows the LED setting of the Wiser Iconic Push-Button Dimmer.

Configuring the Smart Remote Mechanism for other Iconic primary mechanisms

The Smart Remote Mechanism is compatible with other Iconic push-button primary mechanisms. If the primary mechanism is not a dimmer, you must set the Smart Remote Mechanism to operate as a switch (see below).

Changing how the Smart Remote Mechanism operates

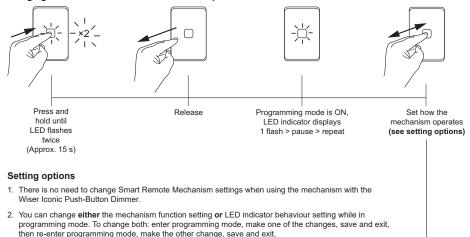

Press and hold until LED flashes twice (Approx. 15 s)

SAVING THE SETTING CHANGE

The setting change is only saved after this step (pressing and holding the push-button until the LED flashes twice).

TO EXIT WITHOUT MAKING THE SETTING CHANGE

Wait 30 seconds without taking any action and the mechanism will exit programming mode.

Setting the mechanism function

Option	Setting	Use mechanism with:	Action to set option	LED indication
1	Operate as a switch (toggle On/Off)	Iconic push-button electronic switches, timers and time clocks Other Iconic push-button devices with ControlLink that require a toggle switch	No action (Option 1 is selected automatically when programming mode starts)	1 flash > pause > repeat
2	Operate as a bell press (momentary switch)	Iconic push-button devices with ControlLink that require a bell press switch	Short press once	2 flashes > pause > repeat
3	Operate as a dimmer (On/Off, ramp Up/Down) DEFAULT SETTING	Iconic push-button dimmers with ControlLink	Short press twice	3 flashes > pause > repeat

Setting the LED Indicator behaviour

To manually change the LED indicator setting to match the settings of the primary mechanism, choose one of these options.


$\overline{}$			·	LED indication
	LED indicator OFF when load is ON; 10% illumination when load is OFF.	Iconic push-button devices with ControlLink that do not support automatic sync of LED indication setting with connected Smart Remote Mech.	Short press three times	4 flashes > pause > repeat
- 1	LED indicator ON when load is ON; OFF when load is OFF.		Short press four times	5 flashes > pause > repeat
- 1	LED indicator OFF at all times.		Short press five times	6 flashes > pause > repeat
,	LED indicator ON when load is ON; 10% illumination when load is OFF DEFAULT SETTING		Short press six times	7 flashes > pause > repeat

Technical data

Note: See product data sheet for full specifications.

Operating voltage	220-240 V a.c., 50 Hz
Load rating	Max. 50 mA
Multi-way dimming limits	Max. 5-way dimming with up to 4 Smart Remote Mechanisms
Multi-way interface	ControlLink
ControlLink cable limit	Max. 50 m for entire installation
Environmental rating	IP20 (designed for indoor use only)
Operating humidity	5%–90% RH, non-condensing
Compliance	AS/NZS 60669.2.1, AS/NZS CISPR-15

Specifications typical at 25 °C.

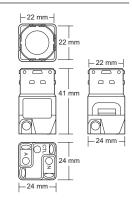

Customer care

Warranty information

We warrant this product for 2 years—visit https://www.schneiderelectric.co.nz/en/about-us/legal/terms-and-conditions.jsp for details.





Schneider Electric (NZ) Ltd

Customer Care: 0800 652 999

Email: sales@nz.schneider-electric.com

www.schneider-electric.com

Schneider Electric reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Schneider Electric 2018

This material is copyright under New Zealand and international laws. Except as permitted under the relevant law, no part of this work may be reproduced by any process without prior written permission of and acknowledgement to Schneider Electric.

PHA30465 January 2018